

CONTENTS

1

GENERAL INFORMATION, SAFETY & TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
SAFETY IN SERVICE	1-12
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-16
TOOLS	1-19
FASTENERS, MEASUREMENTS AND CONVERSIONS	1-27
SPECIFICATIONS	1-28

2

ENGINE & DRIVE MAINTENANCE

ENGINE & DRIVE MAINTENANCE	2-2
FLUIDS & LUBRICANTS	2-28
LUBRICATION POINTS	2-42
BOAT MAINTENANCE	2-43
WINTER STORAGE	2-48
SPRING COMMISSIONING	2-50
FIRING ORDERS	2-51
SPECIFICATIONS	2-52

3

ENGINE MECHANICAL - 4 CYL. INLINE ENGINES

ENGINE MECHANICAL	3-2
EXPLODED VIEWS	3-19
SPECIFICATIONS	3-23

4

ENGINE MECHANICAL - V6 & V8 ENGINES

ENGINE MECHANICAL	4-2
EXPLODED VIEWS	4-36
SPECIFICATION CHARTS	4-50

5

ENGINE OVERHAUL

ENGINE RECONDITIONING	5-2
-----------------------	-----

6

FUEL SYSTEM - CARBURETORS

FUEL & COMBUSTION	6-2
TROUBLESHOOTING	6-3
WIRING DIAGRAMS	6-17
SPECIFICATIONS	6-18

7

FUEL & IGNITION SYSTEM - FUEL INJECTION

FUEL & COMBUSTION	7-2
MULTI-POINT FUEL INJECTION (MPI)	7-3
SYSTEM DIAGNOSIS	7-22
WIRING SCHEMATICS	7-76
ECM PIN LOCATIONS	7-158
DIAGNOSTIC TROUBLE CODE (DTC) CHARTS	7-162

CONTENTS

MAINTENANCE & TESTING	8-3
EXPLODED VIEWS	8-6
FLOW DIAGRAMS	8-10

8

UNDERSTANDING & TROUBLESHOOTING	
ELECTRICAL SYSTEMS	9-2
TROUBLESHOOTING	
BATTERY	9-8
CHARGING SYSTEM	9-10
DESCRIPTION & OPERATION	
STARTER CIRCUIT	9-15
ELECTRONIC SPARK TIMING (EST) SYSTEM	9-18
BREAKERLESS INDUCTIVE DISTRIBUTOR (BID) SYSTEM	9-24
INSTRUMENTS & GAUGES	9-28
SENDING UNITS & SWITCHES	9-30
SPECIFICATIONS	9-52

IGNITION & ELECTRICAL SYSTEMS

9

DESCRIPTION & OPERATION	
STERN DRIVE UNIT - SX & DP-S MODELS	10-2
TROUBLESHOOTING	
UPPER GEAR HOUSING - SX & DP-S	10-7
LOWER GEAR CASE (LOWER UNIT) - SX & DP-S	10-26
TRANSOM ASSEMBLY - SX & DP-S	10-52
STERN DRIVE UNIT - XDP MODELS	10-69
SPECIFICATIONS	10-87

STERN DRIVE - SX, DP-S & XDP

10

POWER TRIM & TILT	11-2
-------------------	------

TRIM & TILT

11

POWER STEERING SYSTEM	12-2
TROUBLESHOOTING	12-8

STEERING SYSTEM

12

REMOTE CONTROL CABLES	13-2
-----------------------	------

REMOTE CONTROLS

13

MASTER INDEX	13-9
--------------	------

MASTER INDEX

ALTERNATOR	9-12	CAMSHAFT, BEARINGS & GEAR	3-16
CHARGING SYSTEM INSPECTION	9-12	CHECKING LIFT	3-16
DISASSEMBLY & ASSEMBLY	9-14	REMOVAL & INSTALLATION	3-16
PRECAUTIONS	9-12	CAMSHAFT POSITION SENSOR (CMP)	7-10
REMOVAL & INSTALLATION	9-14	REMOVAL & INSTALLATION	7-10
TESTING	9-12	CAN YOU DO IT?	1-2
ALTERNATOR OUTPUT TEST	9-12	CARBURETED FUEL SYSTEM	6-3
BATTERY CHARGING CIRCUIT TEST	9-13	CARBURETOR - HOLLEY 2300 2 BBL	6-6
EXCITE/SENSE CIRCUIT TEST	9-13	ELECTRIC FUEL PUMP	6-15
IGNITION CIRCUIT TEST	9-13	FUEL FILTER	6-13
ANCHORS	1-10	MECHANICAL FUEL PUMP	6-13
ANODES (ZINCS)	2-44	OPERATION	6-4
INSPECTION	2-45	TROUBLESHOOTING	6-3
SERVICING	2-45	CARBURETOR - HOLLEY 2300 2 BBL	6-6
AUDIO WARNING SYSTEM	9-30	ADJUSTMENT	6-11
TESTING	9-30	ACCELERATOR PUMP CLEARANCE	6-12
AVOIDING THE MOST COMMON MISTAKES	1-3	ACCELERATOR PUMP STROKE	6-12
AVOIDING TROUBLE	1-2	CHOKE UNLOADER	6-13
BAILING DEVICES	1-10	CHOKE VACUUM	6-12
BALANCE SHAFT	4-32	ELECTRIC CHOKE	6-12
REMOVAL & INSTALLATION	4-32	FLOAT LEVEL - 3.0L ENGINES	6-11
4.3L V6 ENGINES ONLY	4-32	FLOAT LEVEL - V6 & V8 ENGINES	6-12
BASIC OPERATING PRINCIPLES	1-13	IDLE SPEED & MIXTURE	6-13
2-STROKE MOTORS	1-14	ASSEMBLY	6-10
4-STROKE MOTORS	1-16	CLEANING & INSPECTION	6-9
COMBUSTION	1-16	DISASSEMBLY	6-7
BATTERY		REMOVAL & INSTALLATION	6-6
BATTERY CHARGERS	2-48	CHARGING SYSTEM	9-10
BATTERY TERMINALS	2-47	ALTERNATOR	9-12
CLEANING	2-46	GENERAL INFORMATION	9-10
DESCRIPTION & OPERATION	9-8	TROUBLESHOOTING	9-11
REPLACING CABLES	2-48	CHEMICALS	1-17
SAFETY PRECAUTIONS	2-47	CLEANERS	1-18
SPECIFIC GRAVITY	2-46	LUBRICANTS & PENETRANTS	1-18
STORAGE	2-48	SEALANTS	1-18
BATTERY GAUGE	9-29	CIRCUIT BREAKER	7-10
REMOVAL & INSTALLATION	9-29	REMOVAL & INSTALLATION	7-10
TESTING	9-29	COMBINATION MANIFOLD - 3.0L ENGINES	3-10
BELTS	2-9	REMOVAL & INSTALLATION	3-10
ADJUSTMENT - V-BELTS	2-10	COMBUSTION	6-3
ADJUSTMENT - SERPENTINE BELTS	2-11	COMPASS	1-10
INSPECTION	2-9	INSTALLATION	1-11
REMOVAL & INSTALLATION	2-12	PRECAUTIONS	1-12
SERPENTINE BELTS	2-12	SELECTION	1-10
V-BELTS	2-12	COMPONENT REPLACEMENT	6-17
ROUTING DIAGRAMS	2-10	CIRCUIT BREAKER	6-17
BOATING EQUIPMENT	1-10	COOLANT CROSSOVER - 8.1L V8 ENGINES ONLY	8-4
ANCHORS	1-10	REMOVAL & INSTALLATION	4-35,8-4
BAILING DEVICES	1-10	COOLANT EXPANSION TANK	8-4
COMPASS	1-10	REMOVAL & INSTALLATION	8-4
FIRST AID KIT	1-10	COOLING SYSTEM	
OAR/PADDLE	1-10	DRAINING & FILLING	2-34
TOOLS & SPARE PARTS	1-12	SEAWATER SYSTEM - 3.0L ENGINES	2-35
VHF-FM RADIO	1-10	SEAWATER SYSTEM - 4.3L V6 & 5.0L/5.7L V8 ENGINES	2-35
BOAT MAINTENANCE	2-43	SEAWATER SYSTEM - 8.1L V8 ENGINES	2-37
ANODES (ZINCS)	2-44	CLOSED SYSTEM	2-38
BATTERIES	2-46	DRIVE BELTS	8-3
INSIDE THE BOAT	2-43	FLUSHING THE SYSTEM	2-33
THE BOAT'S EXTERIOR	2-43	CLOSED SYSTEMS	2-34
BOATING SAFETY	1-4	GENERAL	2-33
COURTESY MARINE EXAMINATIONS	1-10	SEAWATER SYSTEMS W/O FRESH WATER FLUSH	2-33
REGULATIONS FOR YOUR BOAT	1-4	SEAWATER SYSTEMS W/FRESH WATER FLUSH	
REQUIRED SAFETY EQUIPMENT	1-5	LEVEL CHECK	2-33
BREAKERLESS INDUCTIVE DISTRIBUTOR (BID) SYSTEM	9-24	CLOSED COOLING SYSTEM ONLY	2-33
DESCRIPTION	9-24	PRESSURE CAP TESTING	2-34
DISTRIBUTOR	9-26	PRESSURE TEST	2-34
DISTRIBUTOR CAP	9-26	RAW WATER COOLING TEST	8-3
IGNITION COIL	9-27	RAW WATER FLOW TEST	8-4
TROUBLESHOOTING	9-24	COOLING SYSTEMS	8-2
BUY OR REBUILD?	5-3	DESCRIPTION & OPERATION	8-2
CAMSHAFT	4-33	TROUBLESHOOTING	8-3
CHECKING LIFT	4-33	COURTESY MARINE EXAMINATIONS	1-10
REMOVAL & INSTALLATION	4-33	CRANKSHAFT POSITION SENSOR (CKP)	7-10

13-10 MASTER INDEX

REMOVAL & INSTALLATION	7-10
CYLINDER COMPRESSION	2-17
CHECKING COMPRESSION	2-17
CYLINDER HEAD	
REMOVAL & INSTALLATION	
3.0L ENGINES	3-17
V6 & V8 ENGINES	4-34
ASSEMBLY	5-13
CRACKS & PHYSICAL DAMAGE	5-12
CYLINDER HEAD SURFACE FLATNESS	5-12
DISASSEMBLY	5-5
INSPECTION	5-11
SPRINGS, CAPS/RETAINERS & VALVE KEYS	5-11
VALVE GUIDES	5-11
VALVE SEATS	5-12
VALVES	5-11
REFINISHING & REPAIRING	5-12
CYLINDER HEAD	5-13
SPRINGS, CAPS/RETAINERS & VALVE KEYS	5-13
VALVES	5-12
REMOVAL & INSTALLATION	
3.0L ENGINES	3-17
V6 & V8 ENGINES	4-34
CYLINDER HEAD (VALVE) COVER	3-7
3.0L ENGINES	3-7
V6 & V8 ENGINES	4-8
DESCRIPTION & OPERATION	
BATTERY	9-8
BID SYSTEM	9-24
COOLING SYSTEMS	8-2
ELECTRIC FUEL PUMP	6-15
EST SYSTEM	9-18
LOWER GEAR CASE (LOWER UNIT) - SX & DP-S	10-26
MECHANICAL FUEL PUMP	6-13
POWER STEERING	12-2
POWER TRIM & TILT	11-2
STARTER CIRCUIT	9-15
STARTER MOTOR	9-15
SX & DP-S MODELS	10-2
TRANSOM ASSEMBLY - SX & DP-S	10-52
TRIM/TILT PUMP ASSEMBLY	11-12
UPPER GEAR HOUSING - SX & DP-S	10-7
XDP MODELS	10-69
DETERMINING ENGINE CONDITION	5-2
COMPRESSION TEST	5-2
OIL PRESSURE TEST	5-3
DIAGNOSTIC TROUBLE CODE (DTC) CHARTS	7-162
DIAGNOSTIC TROUBLE CODE SCHEMATICS	7-63
DIAGNOSTIC TROUBLE CODES (DTC)	7-46
CLEARING CODES	7-51
ENGINE PROTECTION MODE CIRCUIT OUT OF RANGE	7-62
GENERAL ELECTRONIC IGNITION SYSTEM DIAGNOSIS - ALL EXC. 8.1L	
GENERAL INFORMATION - PLEASE READ THIS!	7-46
READING CODES	7-50
DIRECTIONS & LOCATIONS	1-2
DISTRIBUTOR	9-21
DISASSEMBLY & ASSEMBLY	
BID	9-27
EST	9-22
REMOVAL & INSTALLATION	
BID	9-26
EST	9-21
MPI	7-11
DISTRIBUTOR AIR GAP	2-24
ADJUSTMENT - BID DISTRIBUTORS ONLY	2-24
DISTRIBUTOR CAP	
REMOVAL & INSTALLATION	
BID	9-26
EST	9-21
MPI	7-10
ECM PIN LOCATIONS	7-158
ELECTRIC FUEL PUMP	6-15

DESCRIPTION	6-15
FUEL SYSTEM CHECKS	6-17
PRESSURE TEST	6-17
REMOVAL & INSTALLATION	6-15
ELECTRICAL COMPONENTS	9-2
CONNECTORS	9-4
GROUND	9-3
LOAD	9-4
POWER SOURCE	9-2
PROTECTIVE DEVICES	9-3
SWITCHES & RELAYS	9-3
WIRING & HARNESSSES	9-4
ELECTRONIC CONTROL MODULE (ECM)	7-12
REMOVAL & INSTALLATION	7-12
ELECTRONIC SPARK TIMING (EST) SYSTEM	9-18
DESCRIPTION	9-18
DISTRIBUTOR	9-21
DISTRIBUTOR CAP	9-21
IGNITION COIL	9-23
TROUBLESHOOTING	9-19
ELECTRONIC TOOLS	1-24
BATTERY CHARGERS	1-24
BATTERY TESTERS	1-24
GAUGES	1-24
MULTI-METERS (DVOMS)	1-24
ENGINE - 3.0L	
DETERMINING MINIMUM ENGINE HEIGHT	3-5
ENGINE ALIGNMENT	3-5
PRIMING THE ENGINE	3-5
REMOVAL & INSTALLATION	3-3
ENGINE & DRIVE MAINTENANCE	2-2
BELTS	2-9
CYLINDER COMPRESSION	2-17
DISTRIBUTOR AIR GAP	2-24
FLAME ARRESTOR	2-5
FUEL FILTER	2-7
IDLE SPEED & MIXTURE	2-24
IGNITION TIMING	2-22
IMPELLER/RAW WATER PUMP	2-16
OVERVIEW	2-2
PCV VALVE	2-25
PROPELLER	2-26
SERIAL NUMBER IDENTIFICATION	2-2
SPARK PLUGS	2-18
SPARK PLUG WIRES	2-21
THERMOSTAT	2-13
VALVE ADJUSTMENT	2-26
ENGINE - V6 & V8	
DETERMINING MINIMUM ENGINE HEIGHT	4-6
ENGINE ALIGNMENT	4-6
PRIMING THE ENGINE	4-7
REMOVAL & INSTALLATION	4-4
ENGINE BLOCK	5-14
ASSEMBLY	5-20
CAMSHAFT, LIFTERS & TIMING ASSEMBLY	5-22
CRANKSHAFT	5-20
CYLINDER HEAD(S)	5-23
PISTONS & CONNECTING RODS	5-21
DISASSEMBLY	5-14
EXPLODED VIEWS	5-15
GENERAL INFORMATION	5-14
CYLINDER RIDGE REMOVAL	5-14
INSPECTION	5-18
BEARINGS	5-19
CAMSHAFT	5-19
CRANKSHAFT	5-19
CYLINDER BORES	5-18
ENGINE BLOCK	5-18
OIL PUMP	5-19
PISTONS & CONNECTING RODS	5-19
REFINISHING	5-19
PISTONS & CONNECTING RODS	5-19
ENGINE CIRCULATING (WATER) PUMP	
REMOVAL & INSTALLATION	

3.0L ENGINES	3-18	TOOLS	5-3
V6 & V8 ENGINES	4-35	ENGINE PREPARATION	5-4
ENGINE COOLANT TEMPERATURE SENSOR (ECT)	7-12	ENGINE RECONDITIONING	5-2
REMOVAL & INSTALLATION	7-12	BUY OR REBUILD?	5-3
ENGINE COUPLER		CYLINDER HEAD	5-5
3.0L ENGINES	3-13	DETERMINING ENGINE CONDITION	5-2
V6 & V8 ENGINES	4-24	ENGINE BLOCK	5-14
ENGINE IDENTIFICATION - 3.0L ENGINES	3-2	ENGINE OVERHAUL TIPS	5-3
ENGINE	3-2	ENGINE PREPARATION	5-4
ENGINE MODEL DESIGNATIONS	3-3	ENGINE START-UP & BREAK-IN	5-23
ENGINE IDENTIFICATION - V6 & V8 ENGINES	4-2	ENGINE START-UP & BREAK-IN	5-23
ENGINE	4-2	BREAKING IT IN	5-24
ENGINE MODEL DESIGNATIONS	4-3	KEEP IT MAINTAINED	5-24
ENGINE MECHANICAL - 3.0L ENGINES	3-2	STARTING THE ENGINE	5-23
CAMSHAFT, BEARINGS & GEAR	3-16	EXHAUST ELBOW - 3.0L ENGINES	3-10
COMBINATION MANIFOLD	3-10	REMOVAL & INSTALLATION	3-10
CYLINDER HEAD	3-17	EXHAUST ELBOW -	
CYLINDER HEAD (VALVE) COVER	3-7	MODELS W/O EMISSION CONTROLS, V6 & V8 ENGINES	4-18
ENGINE	3-3	REMOVAL & INSTALLATION	4-18
ENGINE CIRCULATING (WATER) PUMP	3-18	EXHAUST ELBOW & CATALYST -	
ENGINE COUPLER & FLYWHEEL	3-13	MODELS W/EMISSION CONTROLS, V6 & V8 ENGINES	4-18
ENGINE IDENTIFICATION	3-2	REMOVAL & INSTALLATION	4-18
EXHAUST ELBOW	3-10	EXHAUST HOSE (BELLOWS) - 3.0L ENGINES	3-11
EXHAUST HOSE (BELLOWS)	3-11	REMOVAL & INSTALLATION	3-11
EXHAUST PIPE	3-11	EXHAUST HOSES (BELLOWS) & INTERMEDIATE EXHAUST PIPE -	
EXHAUST VALVE (FLAPPER)	3-12	V6 & V8 ENGINES	4-19
FRONT COVER & OIL SEAL	3-15	REMOVAL & INSTALLATION	4-19
FRONT ENGINE MOUNTS	3-6	EXHAUST MANIFOLD - V6 & V8 ENGINES	4-17
GENERAL INFORMATION	3-2	REMOVAL & INSTALLATION	4-17
HARMONIC BALANCER, PULLEY & HUB	3-14	EXHAUST PIPE	3-11
HYDRAULIC VALVE LIFTER	3-9	REMOVAL & INSTALLATION	3-11
OIL FILTER BYPASS VALVE	3-12	EXHAUST VALVE (FLAPPER)	
OIL PAN	3-12	REPLACEMENT	
OIL PUMP	3-12	3.0L ENGINES	3-12
PUSH ROD COVER	3-8	V6 & V8 ENGINES	4-20
REAR ENGINE MOUNTS	3-7	EXPLODED VIEWS	
REAR MAIN OIL SEAL	3-14	COOLING SYSTEM	
REAR MAIN OIL SEAL HOUSING/RETAINER	3-14	3.0L ENGINES	8-6
ROCKER ARMS & PUSH RODS	3-8	4.3L V6 AND 5.0L & 5.7L V8 ENGINES	8-7
ENGINE MECHANICAL - V6 & V8 ENGINES	4-2	8.1L V8 ENGINES	8-8
BALANCE SHAFT	4-32	ENGINES	
CAMSHAFT	4-33	3.0L ENGINES	3-19
COOLANT CROSSOVER	4-35	4.3L V6 ENGINES	4-36
CYLINDER HEAD	4-34	5.0L & 5.7L V8 ENGINES	4-40
CYLINDER HEAD (VALVE) COVER	4-8	8.1L V8 ENGINES	4-44
ENGINE	4-4	FASTENERS, MEASUREMENTS & CONVERSIONS	1-27
ENGINE CIRCULATING PUMP	4-35	BOLTS, NUTS & OTHER THREADED RETAINERS	1-27
ENGINE COUPLER & FLYWHEEL	4-24	STANDARD & METRIC MEASUREMENTS	1-27
ENGINE IDENTIFICATION	4-2	TORQUE	1-27
EXHAUST ELBOW - MODELS W/O EMISSION CONTROLS	4-18	FIRING ORDERS	2-51
EXHAUST ELBOW & CATALYST -		FIRST AID KIT	1-10
MODELS W/EMISSION CONTROLS	4-18	FLAME ARRESTOR	2-5
EXHAUST HOSES (BELLOWS) & INTERMEDIATE EXHAUST PIPE	4-19	REMOVAL & INSTALLATION	2-5
EXHAUST MANIFOLD	4-17	ALL MODELS W/CARBURETOR	2-5
EXHAUST VALVE (FLAPPER)	4-20	MPI MODELS EXCEPT 8.1L ENGINES	2-6
FRONT COVER & OIL SEAL	4-28	8.1L ENGINES	2-6
FRONT ENGINE MOUNTS	4-7	FLOW DIAGRAMS	8-10
GENERAL INFORMATION	4-2	STERN DRIVE & TRANSOM BRACKET	8-10
HARMONIC BALANCER, PULLEY & HUB	4-27	3.0L ENGINES	8-12
HYDRAULIC VALVE LIFTERS	4-11	4.3L V6 ENGINES	8-12
INTAKE MANIFOLD	4-14	5.0L & 5.7L V8 ENGINES	8-14
LOWER EXHAUST PIPE (Y-PIPE)	4-20	8.1L V8 ENGINES	8-16
OIL FILTER BYPASS VALVE	4-24	FLUID DISPOSAL	2-28
OIL PAN	4-21	FLUIDS & LUBRICANTS	2-28
OIL PUMP	4-23	COOLING SYSTEM	2-32
REAR ENGINE MOUNTS	4-7	FLUID DISPOSAL	2-28
REAR MAIN OIL SEAL	4-25	FUEL & OIL RECOMMENDATIONS	2-28
REAR MAIN OIL SEAL HOUSING/RETAINER	4-26	POWER STEERING	2-32
ROCKER ARMS & PUSH RODS	4-9	POWER TRIM PUMP	2-42
TIMING CHAIN & SPROCKETS	4-30	STERN DRIVE UNIT	2-38
ENGINE OVERHAUL TIPS	5-3		
CLEANING	5-4		
OVERHAUL TIPS	5-3		
REPAIRING DAMAGED THREADS	5-4		

13-12 MASTER INDEX

FLYWHEEL		
REMOVAL & INSTALLATION		
3.0L ENGINES	3-13	
V6 & V8 ENGINES	4-24	
FRONT COVER & OIL SEAL		
REMOVAL & INSTALLATION		
3.0L ENGINES n3-15		
4.3L V6 & 5.0L/5.7L V8 ENGINES	4-28	
8.1L V8 ENGINES	4-28	
FRONT ENGINE MOUNTS		
REMOVAL & INSTALLATION		
3.0L ENGINES - DUAL SIDE MOUNTS	3-6	
3.0L ENGINES - SINGLE FRONT MOUNT	3-6	
V6 & V8 ENGINES	4-7	
FUEL		
ALCOHOL-BLENDED FUELS	6-2, 7-2	
BASICS	7-2	
HIGH ALTITUDE OPERATION	6-3	
OCTANE RATING	6-2, 7-2	
RECOMMENDATIONS	6-3, 7-2	
VAPOR PRESSURE	6-2, 7-2	
FUEL & COMBUSTION		
COMBUSTION	6-3, 7-2	
FUEL	6-2, 7-2	
FUEL & OIL RECOMMENDATIONS	2-28	
ENGINE OIL	2-28	
FUEL	2-28	
OIL & FILTER CHANGE	2-30	
OIL LEVEL CHECK	2-29	
FUEL CELL	7-13	
REMOVAL & INSTALLATION	7-13	
FUEL FILTER		
CARBURETOR FUEL INLET FILTER	2-8	
FUEL PUMP FILTER - 3.0L ENGINES ONLY	2-7	
REMOVAL & INSTALLATION	2-7, 6-13, 7-14	
WATER SEPARATING CANISTER FILTER	2-9	
FUEL GAUGE	9-28	
HOOK-UP	9-28	
REMOVAL & INSTALLATION	9-29	
TESTING	9-29	
TROUBLESHOOTING	9-28	
FUEL INJECTORS	7-14	
REMOVAL & INSTALLATION	7-14	
FUEL LINE QUICK-CONNECT FITTINGS	7-15	
REMOVAL & INSTALLATION	7-15	
FUEL PRESSURE REGULATOR	7-15	
REMOVAL & INSTALLATION	7-15	
FUEL PUMP		
ELECTRIC	6-15, 7-15	
MECHANICAL	6-13	
FUEL PUMP RELAY	7-17	
REMOVAL & INSTALLATION	7-17	
FUEL RAIL	7-18	
REMOVAL & INSTALLATION	7-18	
GENERAL DIAGNOSTIC TESTS	7-31	
AUDIBLE WARNING HORN DIAGNOSIS (ENGINE MOUNTED)	7-39	
AUDIBLE WARNING HORN DIAGNOSIS (DASH MOUNTED)	7-41	
DATA LINK CONNECTOR DIAGNOSIS	7-35	
DIAGNOSTIC TEST SCHEMATICS	7-42	
ENGINE CRANKS BUT WILL NOT RUN	7-35	
FUEL INJECTOR BALANCE TEST (W/SPECIAL TOOL)	7-39	
FUEL INJECTOR COIL TEST - ENGINE COOLANT TEMPERATURE BETWEEN 50-95° F (10-35° C)	7-37	
FUEL INJECTOR COIL TEST - ENGINE COOLANT TEMPERATURE OUTSIDE 50-95° F (10-35° C)	7-38	
FUEL PUMP RELAY CIRCUIT DIAGNOSIS	7-36	
FUEL SYSTEM DIAGNOSIS -37		
GENERAL INFORMATION	7-31	
IDLE AIR CONTROL (IAC) FUNCTION TEST	7-39	
IGNITION RELAY DIAGNOSIS	7-36	
ON-BOARD DIAGNOSTIC (OBD) SYSTEM CHECK	7-35	
HAND TOOLS	1-19	
BREAKER BARS	1-21	
HAMMERS	1-22	
PLIERS	1-22	
SCREWDRIVERS	1-22	
SOCKET SETS	1-9	
TORQUE WRENCHES	1-20	
WRENCHES	1-21	
HARMONIC BALANCER, PULLEY & HUB		
REMOVAL & INSTALLATION		
3.0L ENGINES	3-14	
4.3L V6 & 5.0L/5.7L V8 ENGINES	4-27	
8.1L V8 ENGINES	4-28	
HEAT EXCHANGER - CLOSED COOLING SYSTEM ONLY	8-4	
REMOVAL, DISASSEMBLY & INSTALLATION	8-4	
HOW TO USE THIS MANUAL	1-2	
AVOIDING THE MOST COMMON MISTAKES	1-3	
AVOIDING TROUBLE	1-2	
CAN YOU DO IT?	1-2	
DIRECTIONS & LOCATIONS	1-2	
MAINTENANCE OR REPAIR?	1-2	
PROFESSIONAL HELP	1-2	
PURCHASING PARTS	1-3	
WHERE TO BEGIN	1-2	
HYDRAULIC LINES & MANIFOLD	11-11	
REMOVAL & INSTALLATION	11-11	
SX-M/DP-SM & XDP UNITS	11-11	
SX-A/DP-SA UNITS	11-11	
HYDRAULIC VALVE LIFTERS		
NOISY LIFTERS	4-11	
REMOVAL & INSTALLATION		
3.0L ENGINES	3-9	
4.3L V6 ENGINES	4-12	
V8 ENGINES	4-13	
IDLE AIR CONTROL (IAC) VALVE	7-19	
REMOVAL & INSTALLATION	7-19	
IDLE SPEED & MIXTURE	2-24	
ADJUSTMENT	2-24	
CARBURETED ENGINES	2-24	
FUEL INJECTED ENGINES	2-25	
IGNITION COIL		
REMOVAL & INSTALLATION		
BID	9-27	
EST	9-23	
IGNITION COIL & CONTROL MODULE -		
4.3L V6 & 5.0L/5.7L V8 ENGINES	7-20	
REMOVAL & INSTALLATION	7-20	
IGNITION COILS - 8.1L V8 ENGINES	7-19	
REMOVAL & INSTALLATION	7-19	
IGNITION SWITCH	9-31	
TESTING	9-31	
IGNITION TIMING	2-22	
ADJUSTMENT	2-22	
CARBURETED ENGINES	2-22	
EARLY MPI ENGINES	2-23	
IMPELLER/RAW WATER PUMP		
REMOVAL & INSTALLATION	2-16, 8-5	
INSIDE THE BOAT	2-43	
INSTRUMENTS & GAUGES	9-28	
BATTERY GAUGE	9-29	
FUEL GAUGE	9-28	
OIL & TEMPERATURE GAUGES	9-28	
SPEEDOMETER	9-29	
TACHOMETER	9-30	
INTAKE AIR TEMPERATURE (IAT) SENSOR	7-20	
REMOVAL & INSTALLATION	7-20	
INTAKE MANIFOLD	4-14	
REMOVAL & INSTALLATION	4-14	
4.3L V6 & 5.0L/5.7L V8 ENGINES	4-14	
8.1L V8 ENGINES	4-15	

<p>KNOCK SENSOR (KS) 7-20 REMOVAL & INSTALLATION..... 7-20</p> <p>LOWER EXHAUST PIPE (Y-PIPE) 4-20 REMOVAL & INSTALLATION..... 4-20</p> <p>LOWER GEAR CASE (LOWER UNIT) - SX & DP-S 10-26 DESCRIPTION & OPERATION 10-26 DISASSEMBLY & ASSEMBLY..... 10-27 SX-M SINGLE PROPELLER UNITS 10-27 SX-A SINGLE PROPELLER UNITS..... 10-33 DP-SM DUAL PROPELLER UNITS 10-38 DP-SA DUAL PROPELLER UNITS..... 10-46</p> <p>LOWER GEAR HOUSING (LOWER UNIT) PROPELLER 10-51 REMOVAL & INSTALLATION..... 10-26</p> <p>LUBRICATION POINTS..... 2-42 GIMBAL BEARING & U-JOINTS 2-42 PROPELLER SHAFT 2-42 SHIFT CABLE & TRANSMISSION LINKAGE PIVOT POINTS 2-42 STEERING SYSTEM 2-42 THROTTLE CABLE 2-42</p> <p>MAINTENANCE OR REPAIR? 1-2</p> <p>MAINTENANCE & TESTING..... 8-3 COOLANT CROSSOVER - 8.1L V8 ENGINES ONLY 8-4 COOLANT EXPANSION TANK 8-4 COOLING SYSTEM 8-3 HEAT EXCHANGER - CLOSED COOLING SYSTEM ONLY 8-4 IMPELLER/RAW WATER PUMP 8-5 NEUTRA-SALT TANK 8-5 THERMOSTAT 8-5 WATER (ENGINE) CIRCULATING PUMP..... 8-5</p> <p>MANIFOLD ABSOLUTE PRESSURE (MAP)</p> <p>SENSOR/MANIFOLD AIR TEMPERATURE (MAT) SENSOR..... 7-20 REMOVAL & INSTALLATION..... 7-20</p> <p>MEASURING TOOLS..... 1-25 DEPTH GAUGES..... 1-26 DIAL INDICATORS..... 1-25 MICROMETERS & CALIPERS 1-25 TELESCOPING GAUGES 1-26</p> <p>MECHANICAL FUEL PUMP..... 6-13 DESCRIPTION..... 6-13 FUEL LINE TEST..... 6-15 PRESSURE TEST..... 6-14 REMOVAL & INSTALLATION..... 6-14 VACUUM TEST 6-15</p> <p>MULTI-POINT FUEL INJECTION (MPI) 7-3 CAMSHAFT POSITION SENSOR (CMP) 7-10 CIRCUIT BREAKER..... 7-10 CRANKSHAFT POSITION SENSOR (CKP) 7-10 DESCRIPTION & OPERATION..... 7-3 DISTRIBUTOR 7-11 DISTRIBUTOR CAP..... 7-10 ELECTRONIC CONTROL MODULE (ECM) 7-12 ENGINE COOLANT TEMPERATURE SENSOR (ECT) 7-12 FUEL CELL 7-13 FUEL FILTER..... 7-14 FUEL INJECTORS..... 7-14 FUEL LINE QUICK-CONNECT FITTINGS 7-15 FUEL PRESSURE REGULATOR 7-15 FUEL PUMP..... 7-15 FUEL PUMP RELAY 7-17 FUEL RAIL..... 7-18 IDLE AIR CONTROL (IAC) VALVE 7-19 IGNITION COILS - 8.1L V8 ENGINES..... 7-19 IGNITION COIL & CONTROL MODULE - 4.3L V6 & 5.0/5.7L V8 ENGINES..... 7-20 INTAKE AIR TEMPERATURE (IAT) SENSOR..... 7-20 KNOCK SENSOR (KS) 7-20 MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/MANIFOLD AIR TEMPERATURE (MAT) SENSOR..... 7-20 RELIEVING FUEL PRESSURE..... 7-9 THROTTLE BODY..... 7-21 THROTTLE POSITION SENSOR (TP) 7-22</p>	<p>NEUTRA-SALT TANK..... 8-5 REMOVAL & INSTALLATION..... 8-5</p> <p>NEUTRAL START SWITCH 13-8 ELECTRICAL TEST 13-8 MECHANICAL TEST 13-8</p> <p>OAR/PADDLE..... 1-10</p> <p>OIL FILTER BYPASS VALVE REMOVAL & INSTALLATION 3.0L ENGINES 3-12 V6 & V8 ENGINES 4-24OIL PAN</p> <p>REMOVAL & INSTALLATION 3.0L ENGINES 3-12 4.3L V6 ENGINES..... 4-21 5.0L/5.7L V8 ENGINES..... 4-22 8.1L ENGINES 4-23</p> <p>OIL PRESSURE SENDING UNIT 9-30 TESTING 9-30</p> <p>OIL PUMP REMOVAL, DISASSEMBLY & INSTALLATION 3.0L ENGINES 3-12 V6 & V8 ENGINES 4-23</p> <p>OIL & TEMPERATURE GAUGES 9-28 REMOVAL & INSTALLATION..... 9-28 TESTING 9-28 TROUBLESHOOTING 9-28</p> <p>OPERATION..... 6-4 BASIC FUNCTIONS..... 6-4 CARBURETOR CIRCUITS 6-5 HIGH SPEED CIRCUIT 6-6 LOW SPEED CIRCUIT..... 6-5 MID-RANGE CIRCUIT 6-5 STARTING CIRCUIT..... 6-5 FUEL & AIR METERING 6-4 AIR/FUEL MIXTURE..... 6-5 FLOAT SYSTEMS..... 6-4</p> <p>OTHER COMMON TOOLS 1-22</p> <p>PCV VALVE 2-25 INSPECTION 2-26 REMOVAL & INSTALLATION..... 2-25</p> <p>POWER STEERING..... 2-32 BLEEDING THE SYSTEM..... 2-32 INTEGRATED RESERVOIR MODELS..... 2-32 REMOTE RESERVOIR MODELS 2-32 FLUID LEVEL..... 2-32</p> <p>POWER STEERING COOLER 12-7 REMOVAL & INSTALLATION 12-7</p> <p>POWER STEERING PUMP..... 12-5 REMOVAL & INSTALLATION..... 12-5</p> <p>POWER STEERING SYSTEM..... 12-2 DESCRIPTION & OPERATION 12-2 MAINTENANCE PROCEDURES..... 12-4 POWER STEERING COOLER 12-7 POWER STEERING PUMP..... 12-5 STEERING CABLE 12-4 STEERING CYLINDER 12-5 TESTING 12-2 TIE BAR (TWIN ENGINES) 12-8</p> <p>POWER TRIM PUMP..... 2-42 FLUID LEVEL..... 2-42</p> <p>POWER TRIM & TILT 11-2 DESCRIPTION & OPERATION 11-2 HYDRAULIC LINES & MANIFOLD..... 11-11 SERVICE PRECAUTIONS..... 11-8 SYSTEM BLEEDING 11-9 SYSTEM TESTING 11-9 TRIM LIMITER 11-11 TRIM SENDER..... 11-9 TRIM/TILT CYLINDER 11-14 TRIM/TILT PUMP ASSEMBLY 11-12 TROUBLESHOOTING 11-5</p>
---	--

13-14 MASTER INDEX

PREPPING FOR STORAGE	2-49	SERIAL NUMBER IDENTIFICATION	2-2
THE GREAT ETHANOL DEBATE	2-49	EMISSION CONTROL & TUNE-UP LABEL(S)	2-2
WHERE TO STORE YOUR BOAT & MOTOR	2-49	ENGINE	2-2
PROFESSIONAL HELP	1-2	ENGINE MODEL DESIGNATIONS	2-2
PROPELLER		STERN DRIVE	2-4
REMOVAL & INSTALLATION	10-51	TRANSOM ASSEMBLY	2-5
SX SINGLE PROP MODELS	10-51	SHIFT CABLE	13-4
DP-S/SDP DUO PROP MODELS	10-51	GENERAL INFORMATION	13-4
PURCHASING PARTS	1-3	REMOVAL & INSTALLATION	13-5
PUSH ROD COVER	3-8	SX-M/DP-SM UNITS	13-5
REMOVAL & INSTALLATION	3-8	SX-A/DP-SA UNITS	13-6
REAR ENGINE MOUNTS		XDP UNITS	13-7
REMOVAL & INSTALLATION		SHIFT CABLE SLEEVE REPLACEMENT	13-8
3.0L ENGINES	3-7	SHIFT CABLE STROKE CHECK	13-7
V6 & V8 ENGINES	4-7	SHOP EQUIPMENT	1-17
REAR MAIN OIL SEAL		CHEMICALS	1-17
REMOVAL & INSTALLATION		SAFETY TOOLS	1-17
3.0L ENGINES	3-14	SPARK PLUG WIRES	2-21
4.3L V6 & 5.0L/5.7L V8 ENGINES	4-25	REMOVAL & INSTALLATION	2-22
8.1L V8 ENGINES	4-26	TESTING	2-21
REAR MAIN OIL SEAL HOUSING/RETAINER		SPARK PLUGS	2-18
REMOVAL & INSTALLATION		HEAT RANGE	2-19
3.0L ENGINES	3-14	INSPECTION & GAPPING	2-21
V6 & V8 ENGINES	4-26	READING PLUGS	2-20
REGULATIONS FOR YOUR BOAT	1-4	REMOVAL & INSTALLATION	2-19
CAPACITY INFORMATION	1-4	SERVICE	2-19
CERTIFICATE OF COMPLIANCE	1-5	SPECIAL TOOLS	1-23
DOCUMENTING OF VESSELS	1-4	SPECIFICATIONS	
HULL IDENTIFICATION NUMBER	1-4	ALTERNATOR TEST	9-52
LENGTH OF BOATS	1-4	CAPACITIES	2-59
NUMBERING OF VESSELS	1-4	CARBURETOR	6-18
REGISTRATION OF BOATS	1-4	CONVERSION FACTORS	1-28
SALES & TRANSFERS	1-4	DRIVE MODEL APPLICATIONS	10-89
VENTILATION	1-5	ENGINE - 3.0L	3-24
VENTILATION SYSTEMS	1-5	ENGINE - V6 & V8	4-56
RELIEVING FUEL PRESSURE	7-9	ENGINE MODELS	2-52
REMOTE CONTROL CABLES	13-2	MAINTENANCE INTERVALS	2-58
NEUTRAL START SWITCH	13-8	METRIC BOLTS - TYPICAL TORQUE VALUES	1-28
SHIFT CABLE	13-4	TORQUE - CARBURETORS	6-18
THROTTLE CABLE	13-2	TORQUE - MPI	7-166
REQUIRED SAFETY EQUIPMENT	1-5	TORQUE - STERN DRIVE -	10-87
FIRE EXTINGUISHERS	1-6	TORQUE - 3.0L	3-23
PERSONAL FLOTATION DEVICES	1-7	TORQUE - V6 & V8	4-50
SOUND PRODUCING DEVICES	1-9	TROUBLESHOOTING - CARB	6-18
TYPES OF FIRES	1-5	TROUBLESHOOTING - GENERAL	2-61
VISUAL DISTRESS SIGNALS	1-9	TUNE-UP	2-56
WARNING SYSTEM	1-7	U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES	1-28
ROCKER ARMS & PUSH RODS		SPEEDOMETER	9-29
REMOVAL & INSTALLATION		REMOVAL & INSTALLATION	9-29
3.0L ENGINES	3-8	TESTING	9-29
4.3L V6 ENGINES	4-9	SPRING COMMISSIONING	2-50
5.0L/5.7L V8 ENGINES	4-9	SPRING COMMISSIONING CHECKLIST	2-50
8.1L V8 ENGINES	4-10	SPRING COMMISSIONING CHECKLIST	2-50
VALVE LASH ADJUSTMENT		STARTER CIRCUIT	9-15
3.0L ENGINES	3-8	DESCRIPTION & OPERATION	9-15
4.3L V6 & 8.1L V8 ENGINES	4-11	STARTER MOTOR	9-15
5.0L/5.7L V8 ENGINES	4-11	TROUBLESHOOTING	9-15
SAFETY IN SERVICE	1-13	STARTER MOTOR	9-15
DO'S	1-13	DESCRIPTION & OPERATION	9-15
DON'TS	1-13	DISASSEMBLY & ASSEMBLY	9-18
SAFETY TOOLS	1-17	PRECAUTIONS	9-16
EYE & EAR PROTECTION	1-17	REMOVAL & INSTALLATION	9-17
WORK CLOTHES	1-17	TESTING	9-17
WORK GLOVES	1-17	SOLENOID CONTACTS TEST	9-17
SENDING UNITS & SWITCHES	9-30	STARTER CIRCUIT RESISTANCE	9-17
AUDIO WARNING SYSTEM	9-30	TROUBLESHOOTING	9-16
IGNITION SWITCH	9-31	BATTERY	9-16
OIL PRESSURE SENDING UNIT	9-30	CABLE CONNECTION	9-17
WATER TEMPERATURE SENDER	9-30	CURRENT DRAW	9-17
		SOLENOID	9-17

<p>STEERING CABLE 12-4</p> <p> CABLE INSTALLATION PROBLEMS 12-4</p> <p> MAINTENANCE 12-4</p> <p> REMOVAL & INSTALLATION 12-4</p> <p>STEERING CYLINDER 12-5</p> <p> REMOVAL & INSTALLATION 12-5</p> <p>STERN DRIVE UNIT - SX & DP-S MODELS</p> <p>CHECKING FOR WATER 2-39</p> <p>DESCRIPTION & OPERATION 10-2</p> <p>DRAIN & REFILL 2-39</p> <p> SX-M UNITS 2-39</p> <p> DP-SM UNITS 2-40</p> <p> SX-A AND DP-SA UNITS 2-40</p> <p>FLUID LEVEL 2-38</p> <p>REMOVAL & INSTALLATION 10-2</p> <p> SX-M/DP-SM UNITS 10-2</p> <p> SX-A/DP-SA UNITS 10-4</p> <p>TRIM SENDING UNIT ADJUSTMENT 10-6</p> <p>STERN DRIVE UNIT - XDP MODELS</p> <p>CHECKING FOR WATER 2-39</p> <p>DESCRIPTION & OPERATION 10-69</p> <p>DRAIN & REFILL 2-41</p> <p>EXHAUST BELLOW 10-77</p> <p> REMOVAL & INSTALLATION 10-77</p> <p>FLUID LEVEL 2-38</p> <p>GIMBAL BEARING - XDP UNITS 10-85</p> <p> REMOVAL & INSTALLATION 10-85</p> <p>GIMBAL HOUSING/TRANSOM SHIELD - XDP UNITS 10-86</p> <p> DISASSEMBLY & ASSEMBLY 10-86</p> <p>GIMBAL RING - XDP UNITS 10-84</p> <p> REMOVAL & INSTALLATION 10-84</p> <p>HORIZONTAL & UPPER VERTICAL SHAFT ASSEMBLIES 10-70</p> <p> ASSEMBLY & INSTALLATION 10-73</p> <p> BACKLASH & SHIM ADJUSTMENTS 10-74</p> <p> REMOVAL & DISASSEMBLY 10-70</p> <p>LOWER VERTICAL DRIVESHAFT & PROPELLER SHAFT ASSEMBLIES 10-79</p> <p> ASSEMBLY & INSTALLATION 10-81</p> <p> REMOVAL & DISASSEMBLY 10-79</p> <p>PROPELLER 10-84</p> <p> REMOVAL & INSTALLATION 10-84</p> <p>SHIFT MECHANISM 10-77</p> <p> DISASSEMBLY, ASSEMBLY & SHIMMING 10-78</p> <p> REMOVAL & INSTALLATION 10-77</p> <p>STERN DRIVE UNIT 10-69</p> <p> PRESSURE & VACUUM TEST 10-70</p> <p> REMOVAL & INSTALLATION 10-69</p> <p>U-JOINT BELLOW 10-77</p> <p> REMOVAL & INSTALLATION 10-77</p> <p>U-JOINT/DRIVESHAFT ASSEMBLY 10-76</p> <p> DISASSEMBLY & ASSEMBLY 10-76</p> <p> REMOVAL & INSTALLATION 10-76</p> <p>SYSTEM BLEEDING - PTT 11-9</p> <p> FILLING & BLEEDING A DRY SYSTEM 11-9</p> <p> GENERAL 11-9</p> <p>SYMPTOM TESTS 7-24</p> <p> PRELIMINARY & INTERMITTENT CHECKS 7-24</p> <p>SYSTEM DIAGNOSIS 7-22</p> <p> DIAGNOSTIC TROUBLE CODES (DTC) 7-46</p> <p> DIAGNOSTIC TROUBLE CODE SCHEMATICS 7-63</p> <p> GENERAL DIAGNOSTIC TESTS 7-31</p> <p> GENERAL INFORMATION 7-22</p> <p> PRECAUTIONS 7-23</p> <p> SYMPTOM TESTS 7-24</p> <p>SYSTEM TESTING - PTT 11-9</p> <p>TACHOMETER 9-30</p> <p> REMOVAL & INSTALLATION 9-30</p> <p> TESTING 9-30</p> <p>TEST EQUIPMENT 9-4</p> <p> JUMPER WIRES 9-4</p> <p> MULTI-METERS 9-5</p> <p> TEST LIGHTS 9-5</p>	<p>THE BOAT'S EXTERIOR 2-43</p> <p> ABOVE WATERLINE 2-43</p> <p> BELOW WATERLINE 2-44</p> <p>THERMOSTAT 2-13</p> <p> REMOVAL & INSTALLATION 2-13</p> <p> 3.0L ENGINES 2-13</p> <p> V6 & V8 ENGINES 2-14</p> <p> TESTING 2-16</p> <p>THROTTLE BODY 7-21</p> <p> REMOVAL & INSTALLATION 7-21</p> <p>THROTTLE CABLE 13-2</p> <p> GENERAL INFORMATION 13-2</p> <p> REMOVAL & INSTALLATION 13-2</p> <p> 3.0L ENGINES 13-2</p> <p> 4.3L V6 & 5.0/5.7L V8 ENGINES 13-3</p> <p> 8.1L V8 ENGINES 13-4</p> <p>THROTTLE POSITION SENSOR (TP) 7-22</p> <p> REMOVAL & INSTALLATION 7-22</p> <p>TIE BAR (TWIN ENGINES) 12-8</p> <p> ADJUSTMENT 12-8</p> <p>TIMING CHAIN & SPROCKETS 4-30</p> <p> REMOVAL & INSTALLATION 4-30</p> <p>TOOLS 1-19</p> <p> ELECTRONIC TOOLS 1-24</p> <p> HAND TOOLS 1-19</p> <p> MEASURING TOOLS 1-25</p> <p> OTHER COMMON TOOLS 1-22</p> <p> SPECIAL TOOLS 1-23</p> <p>TOOLS & SPARE PARTS 1-12</p> <p>TRANSOM ASSEMBLY - SX & DP-S 10-52</p> <p> DESCRIPTION & OPERATION 10-52</p> <p> GIMBAL HOUSING/TRANSOM SHIELD 10-59</p> <p> GIMBAL RING - SX-M/DP-SM UNITS 10-55</p> <p> PIVOT HOUSING - SX-M/DP-SM UNITS 10-52</p> <p> PIVOT HOUSING/GIMBAL RING ASSEMBLY - SX-A/DP-SA UNITS 10-57</p> <p>TRIM LIMITER 11-11</p> <p>TRIM SENDER 11-9</p> <p> ADJUSTMENT 11-9</p> <p> REMOVAL & INSTALLATION 11-10</p> <p> SX-M/DP-SM & XDP MODELS 11-10</p> <p> SX-A/DP-SA MODELS 11-10</p> <p>TRIM/TILT CYLINDER 11-14</p> <p> DISASSEMBLY & ASSEMBLY 11-17</p> <p> REMOVAL & INSTALLATION 11-15</p> <p> SX-M/DP-SM MODELS 11-15</p> <p> SX-A/DP-SA MODELS 11-16</p> <p> XDP MODELS 11-17</p> <p>TRIM/TILT PUMP ASSEMBLY 11-12</p> <p> DESCRIPTION & OPERATION 11-12</p> <p> DISASSEMBLY & ASSEMBLY 11-13</p> <p> REMOVAL & INSTALLATION 11-12</p> <p> SX-M/DP-SM & XDP UNITS 11-12</p> <p> SX-A/DP-SA UNITS 11-13</p> <p>TROUBLESHOOTING</p> <p> BASIC OPERATING PRINCIPLES 1-13</p> <p> BID SYSTEM 9-24</p> <p> CHARGING SYSTEM 9-11</p> <p> COMBUSTION RELATED PISTON FAILURES 6-4</p> <p> COMMON FUEL PROBLEMS 6-3</p> <p> ELECTRICAL SYSTEM 9-6</p> <p> ENGINE OVERHEATS - CLOSED SYSTEM 8-3</p> <p> ENGINE OVERHEATS - MECHANICAL 8-3</p> <p> ENGINE OVERHEATS - RAW WATER SYSTEM 8-3</p> <p> EST SYSTEM 9-19</p> <p> FUEL GAUGE 9-28</p> <p> OIL & TEMPERATURE GAUGES 9-28</p> <p> POWER STEERING SYSTEM DIAGNOSIS 12-8</p> <p> POWER TRIM & TILT 11-5</p> <p> STARTER CIRCUIT 9-15</p> <p> STARTER MOTOR 9-16</p> <p> STERN DRIVE - SX & DP-S MODELS 10-2</p> <p> WATER IN CYLINDERS 8-3</p> <p> WATER IN OIL 8-3</p>
--	---

13-16 MASTER INDEX

UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS . . .	9-2
BASIC ELECTRICAL THEORY	9-2
ELECTRICAL COMPONENTS	9-2
TEST EQUIPMENT	9-4
TROUBLESHOOTING THE ELECTRICAL SYSTEM	9-6
WIRE & CONNECTOR REPAIR	9-7
UPPER GEAR HOUSING - SX & DP-S	10-7
DESCRIPTION & OPERATION	10-7
UPPER GEAR HOUSING	10-7
ASSEMBLY	10-14
BACKLASH & SHIM ADJUSTMENTS	10-17
GEAR LASH & CONTACT PATTERN	10-18
DISASSEMBLY	10-8
PRESSURE & VACUUM TEST	10-8
REMOVAL & INSTALLATION	10-7
U-JOINT/DRIVE SHAFT ASSEMBLY	10-21
DISASSEMBLY & ASSEMBLY - SX-M/DP-SM UNITS ONLY	10-21
REMOVAL & INSTALLATION	10-21
U-JOINT BELLOWS	10-22
REMOVAL & INSTALLATION	10-22
EXHAUST BELLOWS	10-22
REMOVAL & INSTALLATION	10-22

SHIFT MECHANISM	10-22
DISASSEMBLY, ASSEMBLY & SHIMMING	10-23
REMOVAL & INSTALLATION	10-22
VALVE ADJUSTMENT	2-26
VHF-FM RADIO	1-10
WATER (ENGINE) CIRCULATING PUMP	8-5
REMOVAL & INSTALLATION	8-5
WATER TEMPERATURE SENDER	9-30
TESTING	9-30
WINTER STORAGE	2-48
PREPPING FOR STORAGE	2-49
WINTER STORAGE CHECKLIST	2-49
WINTER STORAGE CHECKLIST	2-49
WIRE & CONNECTOR REPAIR	9-7
WIRING DIAGRAMS	
ELECTRIC FUEL PUMP CIRCUIT	6-17
ENGINE	9-32
MPI	7-76